

Spare Parts EL Series (twin system)

SERVICE KITS

Name	Art.-No.	Contents		Pos.	EL-120W	EL-150	EL-200
		Parts	Qty.				
Diaphragm Kit	K-EL-D	Diaphragm	2	11	2	2	2
		Diaphragm Holder	2	10			
		Nut	2	23			
		Valve Box & Valve	2	12			
		Filter Element	1	2			
		Magnet support jig	4				
		Manual	1				
Magnet Kit	K-EL60,80-15-M	Magnet	1	9	2		
		Nut	2	23			
	K-EL80-17,100-M	Magnet	1	9		2	2
		Nut	2	23			
Driving Unit	EL-80-17DU	Driving Unit EL-80-17	1		2		2
	EL-100DU	Driving Unit EL-100					
	EL-120W DU	Driving Unit EL-120W					

PART LIST

Name	Art.-No.	Pos.	EL-120W	EL-150	EL-200
Filter Element	FILTER-EL	2	2	2	2
Overall Cover		3	1	1	1
Shock Absorber		4	2	2	2
Holder Cover	HOLDERCOVER-EL	5	2	2	2
Auto Stopper (48 mm, white)	S-EL60,80-15,120W	6	2		
Auto Stopper (46 mm, grey)	S-EL80-17,150			2	
Auto Stopper (45 mm, blue)	S-EL100,200				2
Solenoid	SOLENOID-EL-60	7	2		
	SOLENOID-EL-80-17			2	
	SOLENOID-EL-100				2
	SOLENOID-EL-120W		2		
Solenoid Holder		8	2	2	2
Magnet		9	2	2	2
Diaphragm Holder		10	4	4	4
Diaphragm Pair	D-EL	11	2	2	2
Valve Box		12	4	4	4
Connecting Pipe	CONNECTINGPIPE-EL	13	4	4	4
Hose Band		14	8	8	8
Vibration Isolating Rubber		15	8	8	8
Tank Base Cover		16	2	2	2
Tank Base Packing	BASEPACKING-ELW	17	1	1	1
Tank Base		18	1	1	1
Rubber Foot	ROBBERFOOT-ELW	19	4	4	4
Power Supply Cord		20	1	1	1
Lead-in Wire Bush		21	1	1	1
Air Supply Hose	SUPPLYHOSE-ELW	22	1	1	1
Hexagonal Nut (Magnet)		23	4		
Screw (Magnet)				4	4
Screw (Holder Cover)		24	8	8	8
Screw (Auto Stopper)		25	4	4	4
Screw (Solenoid)		26	12	12	12
Screw (Overall Cover)		27	6	6	6
Screw (Valve Box)		28	16	16	16
Screw (Tank Base Cover)		29	12	12	12
Screw (Grounding)		30	1	1	1
Screw (Filter Cover)		31	2	2	2
Hexagonal Nut		32	6	6	6
Hose Band		33	1	1	1
Connecting Cord		34	1	1	1
Screw (Connecting Cord)		35	2	2	2
Screw (Rubber Foot)		36	4	4	4
Hose Band (big)		37	1	1	1

EL-150. 200

