

Spare Parts SLL Series									
SERVICE KITS									
Name	Art.-No.	Contents			Pos.	Requirde Qty.			
		Parts	Qty.			SLL-20	SLL-30	SLL-40	SLL-50
Diaphragm Kit	K-SLL-D	Diaphragm	2	10					
		Diaphragm Holder	2	9					
		Nut	2	22					
		Valve Box & Valve	2	11	1	1	1	1	
		Filter Element	1	3					
		Filter Cover Packing	1	2					
		Tank Base Packing	1	17					
		Manual	1						
Magnet Kit	K-SLL-M	Magnet	1	8		1	1	1	1
		Nut	2	22					
Driving Unit SLL-20	SLL-20DU	Driving Unit	1		1				
Driving Unit SLL-30	SLL-30DU					1			
Driving Unit SLL-40	SLL-40DU							1	
Driving Unit SLL-50	SLL-50DU								1
PART LIST									
Name	Art.-No.			Pos.	Required Qty.				
					SLL-20	SLL-30	SLL-40	SLL-50	
Filter Cover				1	1	1	1	1	
Filter Cover Packing				2	1	1	1	1	
Filter Element	FILTER-SLL			3	1	1	1	1	
Overall Cover	COVER-SLL			4	1	1	1	1	
Holder Cover	HOLDERCOVER-SLL			5	1	1	1	1	
Solenoid Pair	SOLENOID-SLL-20			6	1				
	SOLENOID-SLL-30					1			
	SOLENOID-SLL-40							1	
	SOLENOID-SLL-50								1
Solenoid Holder				7	1	1	1	1	
Magnet				8	1	1	1	1	
Diaphragm Holder				9	2	2	2	2	
Diaphragm Pair	D-SLL			10	1	1	1	1	
Valve Box	VALVEBOX-SLL			11	2	2	2	2	
Conneting Pipe				12	2	2	2	2	
Vibration Isolating Rubber	SILENTBLOC-SLL			13	4	4	4	4	
Tank Base Cover				14	1	1	1	1	
Tank Packing				15	1	1	1	1	
Tank Base				16	1	1	1	1	
Tank Base Packing				17	1	1	1	1	
Rubber Foot	ROBBERFOOT-SLL			18	4	4	4	4	
Power Supply Cord				19	1	1	1	1	
Lead-in Wire Bush				20	1	1	1	1	
L-Type Air Supply Hose	L-TYPE-HOSE			21	1	1	1	1	
Hexagonal Nut				22	2	2	2	2	
Screw (Holder Cover)				23	4	4	4	4	
Screw (Solenoid)				24	6	6	6	6	
Screw (Valve Box)				25	8	8	8	8	
Screw (Tank Base Cover)				26	8	8	8	8	
Screw (Grounding)				27	1	1	1	1	
Screw (Tank Base)				28	4	4	4	4	
Screw (Filter Cover)				29	1	1	1	1	
Hose Band				30	2	2	2	2	

